

INSTALLATION GUIDE

ID-P350 Self-adhesive Tube Markers
for Marine, Oil & Gas and Industrial Applications



Tube Marker

PRE-INSTALLATION



IDIGO Markers



Sealing Tapes



Clean Cloth




Garbage Bags

INSTALLATION

1 Ensure the pipe/tube surface is clean to obtain smooth and straight mounting



2 Flip the marker around and remove the wax paper.

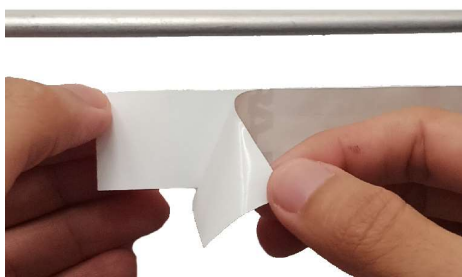

3 Align the marker so that the content is centralize for visibility and paste it on.



4 Start pasting by pressing on the marker around the pipe/tube evenly.



5 Once you have pasted around the pipe/tube, remove the wax paper from the sealing tape



6 Paste the sealing tape over the ends of the marker and you are done



GENERAL

- Ensure that all surfaces are cleaned properly for better adhesion.
- Please collect all trash and dispose accordingly