

INSTALLATION GUIDE

ID-Sx7x/yyy Self-Mounting Photoluminescent Signs
for Marine, Oil & Gas and Industrial Applications



STICK ON BRACKET

PRE-INSTALLATION



IDIGO Safety Sign



Spray Bottle with
Soap Water



Squeegee



Thinner



Ruler



Cloth



Marker Pen

INSTALLATION


- 1 Clean surface of the plate using a cloth damp with a little bit of thinner




- 2 After cleaning, Spray some soap water on the surface of the aluminum plate




- 3 Use a ruler and marker to mark out the position of the sticker

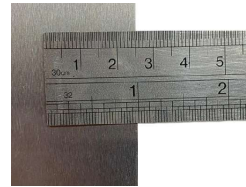

- 4 Remove the wax paper from the back of the sticker

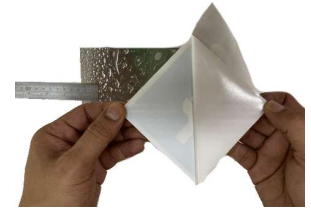

- 5 Spray soap water on the adhesive surface (back of the sticker)

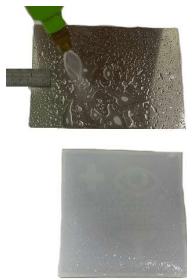

- 6 Position the sticker to flush with the marking for top & bottom. (Soap water allows movement)



- 7 After positioning, use the squeegee to squeeze out the water, starting from the mid point of the sign.



- 8 **COMPLETE!**



GENERAL

- Wear safety gloves during installation.
- To mark out the sticker position, measure 25mm from the side to centre.
- Soap Water mix: For every 1 litre, put 1-1.5 pump of soap and mix well.